/e/0®

Nero Bambino 0.9L Kettle

Code: 740011

INSTRUCTION MANUAL



IMPORTANT SAFEGUARDS

- Read all instructions before using.
- Do not let the cord hang over the edge of a table or counter, or touch a hot surface.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Do not operate the appliance while empty to avoid damaging the heat elements.
- Ensure that the kettle is used on a firm and flat surface out of reach of children.

- To protect against a fire, electric shock or personal injury, do not immerse cord, electrical plugs or kettle in water or other liquids.
- While water is boiling, or just after water has finished boiling, avoid contact with steam from the spout.
- Close supervision is necessary when any appliance is used by or near children.
- Do not touch the hot surface. Use the handle or the button.
- The attached base cannot be used for other than intended use.
- Extreme caution must be used when moving an appliance containing hot water.
- This kettle is for household use only. Do not use outdoors.
- Unplug the kettle from the outlet when not in use and before cleaning. Allow the kettle to cool before putting on or taking off parts, and before cleaning the appliance.
- To disconnect, turn any control to "off," then remove plug from wall outlet.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid hazard.
- This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
- Do not use the appliance for other than intended use.
- The kettle can only be used with the stand provided.
- If the kettle is overfilled, boiling water may spill out.



BEFORE USING YOUR KETTLE

If you are using the kettle for the first time, it is recommended that you should clean your kettle before use by boiling a full kettle of water twice and then discarding the water. Wipe the surface with a damp cloth.

NOTE: The maximum capacity of kettle is 0.9L.

OPERATION OF YOUR KETTLE

1. To use the kettle, remove it from the power base and open lid by pressing the button at the top of lid handle. Fill with the desired amount of water, and then close the lid. Alternatively, the kettle may be filled through the spout. The water level should not exceed the maximum mark or sit below the minimum level. Too little water will result in the kettle switching off before the water has boiled.

NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before plugging into the power outlet.

1. Position the kettle on the power base.

2. Connect the plug into a power outlet. Press down the switch and the indicator will light up. The kettle will switch off

automatically once the water has boiled.

3. Lift the kettle from the power base before pouring the water.

4. The kettle will not reboil until the switch is pressed again. The kettle may be stored on the power base when not in

use.

NOTE: Ensure that the switch is free of obstructions and the lid is firmly closed. The kettle will not turn off if the switch is constrained or the lid is open.

BOIL DRY PROTECTION

Should you accidentally let the kettle operate without water, the boil dry protection will automatically switch off the power. If this occurs, allow the kettle to cool before filling with cold water and reboiling.

CLEANING AND MAINTENANCE

Always disconnect the appliance from the power outlet before cleaning.

- 1. Never immerse the kettle, power cord or power base in water, or expose these parts to moisture.
- 2. Wipe the body clean with a damp cloth.
- 3. Remember to clean the filter at intervals.
- 4. Do not use chemical, steel or abrasive cleaners to clean the outside of the kettle to prevent surface damage.

REMOVAL OF MINERAL DEPOSITS

Your kettle should be periodically descaled to ensure efficient operation.

WARNING:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 2. Children should be supervised to ensure that they do not play with the appliance.
- This appliance is intended to be used in household and similar applications such as: Staff kitchen areas in shops, offices and other working environments; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- 4. CAUTION: Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not move while the kettle is switched on.

Disposal

Do not dispose of old or defective appliances in domestic garbage; this should only be done through public collection points.

NOTE:

- 1. The kettle is only to be used with the stand provided.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; by clients in hotels, motels and other residential type environments.



IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/95/EC.

At the end of its working life, this product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household appliance separately avoids possible negative consequences for the environment and health, deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.

SPECIFICATIONS	
Rating	220V-240V
Capacity	0.9L
Total Electric Absorber Power	1000W-1300W

Imported By R. Weatherdon & Co Pty Ltd Sydney - Australia

www.weatherdon.com.au

Made in China