

Nero[®]

**NERO DELIA 0.8L
STAINLESS STEEL KETTLE**



**Product No. 740030
INSTRUCTION MANUAL**

**Images in this manual are for illustrative purposes only.
Due to constant improvements, we advise that changes to the design, material,
specifications and product configuration may occur at any time without notice.**



FEATURES:

- 1. Cool to touch push down lid**
- 2. Stainless steel filter spout**
- 3. Polished stainless steel body**
- 4. Auto-off indicator lamp**
- 5. Push down on/off switch**
- 6. 360° Base**

General Safety Instructions

- Read the operating instructions carefully before putting the appliance into operation and keep the instructions including the warranty, the receipt and, if possible, the box with the internal packing.
- The appliance is designed exclusively for private use and for the envisaged purpose. This appliance is not fit for commercial use. Do not use it outdoors (except if it is designed to be used outdoors). Keep it away from sources of heat, direct sunlight, humidity (never dip it into any liquid) and sharp edges. Do not use the appliance with wet hands. If the appliance is humid or wet, unplug it immediately. Do not put it in water.
- When cleaning or putting it away, switch off the appliance and always pull out the plug from the socket (pull on the plug, not the cable) if the appliance is not being used and remove the attached accessories.

- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- Check the appliance and the cable for damage on a regular basis. Do not use the appliance if it is damaged.
- Do not try to repair the appliance on your own. Always contact an authorized technician. To avoid the exposure to danger, always have a faulty cable be replaced only by the manufacturer, by our customer service or by a qualified person and with a cable of the same type.
- Use only original spare parts.
- Pay careful attention to the following “Special Safety Instructions“.

Special Safety Instructions for this Machine

- Use only cold water when filling.
- The water level must be between the MAX. and MIN. marks!
- Switch the machine off before removing it from the base.
- Always ensure that the lid is tightly closed.
- The base and exterior of the machine must not become wet.
- Electrical usage: AC 220-240V – 50Hz

First Use of the Machine

Please read these operating instructions carefully and keep them in a safe place. Before using for the first time, boil fresh water at least twice in the appliance. Use only water without any additives or ingredients.

Operation

1. Place the machine on a flat surface.
2. Open the kettle by pressing the unlocking button in the lid. Then fill in some water. The water level can be read off using the water level indicator on the kettle. Please do not overfill the kettle.
3. Close the lid by releasing the unlocking button in the lid.
4. Place the kettle flush on the base.

Electrical Connection

1. Switch the kettle on with the switch in the handle bottom. The indicator lamp lights up.
2. The kettle switches off automatically when the water has boiled. Now disconnect the kettle from the mains power supply. Always hold the lid closed when pouring the water out. Beware of scalding!

Cleaning

- Always pull out the plug from the socket before cleaning!
- The exterior of the machine should be cleaned, if necessary, with a slightly damp cloth without additives.

Decalcification

- The frequency of the decalcifying operation depends on the hardness of the water and on how often the appliance is used.
- If the machine switches off before the water boils, it probably needs to be decalcified.
- Please do not use vinegar but a commercially available decalcification agent on the basis of citric acid. Only use the quantities stated in the instructions.

USE NERO DESCALER TABLETS FOR BEST RESULTS
PRODUCT NO. 80000 (PACKS OF 10)

Backed by the Nero 1 Year Warranty

Imported By:
R Weatherdon & Co Pty Ltd

www.weatherdon.com.au

Made in China