


NERO BASIX 1600W HAIR DRYER

PRODUCT NO: 7411551

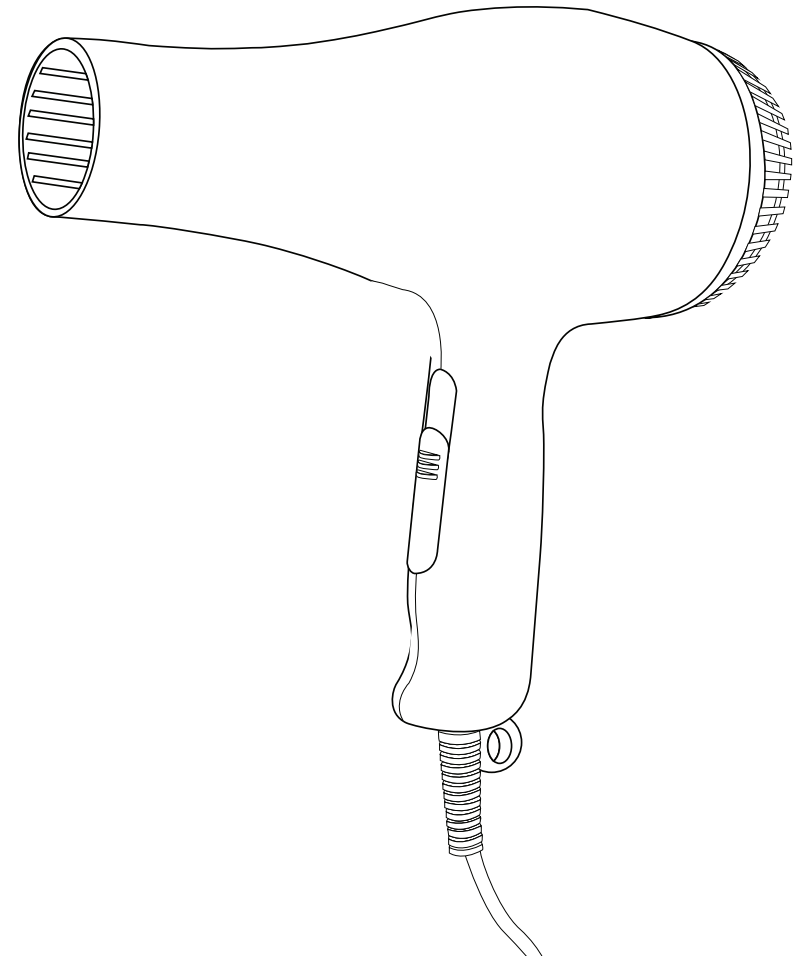

Backed by Nero's 12 month replacement guarantee

Imported by Weatherdon
www.weatherdon.com.au

Made in China

Nero[®]

Model and Specifications

7411551
220V-240V~
50Hz
1400W-1600W

Attention!

Read all instructions before using and save these instructions

When using an electrical appliance, basic safety precautions should always be observed, including the following:

Check if the voltage indicated on the appliance corresponds to the local voltage before you connect the appliance.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

WARNING - Do not use this appliance near water or bathtubs, basins or other vessels.

When the hair dryer is used in a bathroom, unplug the appliance after use; the proximity of water presents a hazard, even when the hair dryer is switched off.

For additional protection, we advise you to install a residual current device (RCD) with a rated residual operating current not exceeding 30mA in the circuit supplying bathroom. Ask your installer for advice.

Never block the air grilles.

If the appliance overheats, it will switch off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.

Do not direct airflow towards the eyes or other sensitive areas.

Neither should the appliance be used with wet hands nor immersed in water, held in running water, or allowed to become wet.

Do not use the hair dryer for purposes other than drying and styling human hair.

Do not pull the cord with unnecessary force. Do not wrap the cord around the unit. Check cord regularly for any signs of damage.

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person.

Always switch the appliance off before putting it down, even if it is only for a moment.

Always unplug the appliance after use.

Clean the appliance after use to avoid the accumulation of grease and other residues.

How to use

Make sure the power switch is in the "0" position. Insert the plug into outlet and turn on the power switch after testing.

Adjust the temperature switch to suitable positions

Settings	Function
0	Switch off
1	Gently dry the hair
2	Dry shower-wet hair quickly

Storage

When not in use "unplug it".

Allow the appliance to cool and store it in a dry location. This hair dryer features a loop allowing it to be conveniently hung on a hook for easy access. Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break. If the supply cord of this appliance becomes damaged, the appliance must be replaced by returning to the retailer from which the product was purchased or a similarly qualified person in order to avoid a hazard.

Cleaning

The appliance can be cleaned with a dry cloth.

The attachments can be cleaned with a moist cloth or rinsed under a running tap. Remove the attachments from the appliance before cleaning them. Make sure the attachments are dry before using or storing them.

Never rinse the appliance with water.

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household waste. To prevent possible harm to the environment or human health from controlled disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.