



## Instruction manual for 7411702 wall-mounted hair dryer

### NOTES

Please read the instruction manual thoroughly before using your new appliance. It is important to keep these instructions as a useful reminder that'll help you enjoy the many features available. The manufacturer is not responsible if the appliance becomes damaged or defective as a result of the user not following the information included in the instruction manual. If the appliance becomes faulty during regular use, it should only be repaired by an authorised service engineer.

### IMPORTANT SAFETY INFORMATION

**!** The following safety instructions must be followed when using the appliance. Please read this section very carefully!

Of course, it's not possible for us to anticipate or provide safety rules for every specific situation, so we ask you to apply commonsense precautions when using the appliance in a situation that isn't described below.

- This hair dryer has been designed for domestic use only. It must not be used for commercial purposes and must never be operated outdoors. Only use the appliance when it has been fixed to a wall as described in these instructions.

**!** **Warning! Never use the hair dryer when in the bath, in the shower or near a basin filled with water due to the risk of life-threatening electric shock. Follow the safety instructions carefully when fitting the appliance. If the appliance is dropped into any water, it must be unplugged immediately. Never touch the appliance if it is wet and still plugged in to the mains. An appliance that's been dropped into water or subjected to high levels of humidity should be taken to an authorised service agent for checking and repair before it's used again.**

- We recommend including an RCD circuit breaker of no more than 30mA sensitivity in the electricity supply if you install the hair dryer in a bathroom. Always consult a professional electrician for this type of work.

- If you want to take a break from drying your hair, always switch off the appliance and return

1

it to the wall holder. Never let the dryer hang from the curly cord.

- In order to avoid an electric shock, never immerse the appliance, the cord or the plug in water or any other liquid.
- Do not touch the appliance with moist hands. Plug the connector of the appliance into the mains with dry hands only, and check that the casing, power cord and connector of the appliance as well as the mains socket are dry. Should any moisture get inside the casing of the appliance stop using it immediately and take it to a specialized service for checking or repair.
- This device is not supposed to be used by physically or mentally handicapped people, or persons without experience or knowledge (including children, as well), unless such a person supervises or guides their use of the device, who is at the same time responsible for their safety. As for children, supervision is recommended to make sure that they do not play with the device. This device is not supposed to be used by children under the age of 14, not even with supervision!
- Never lay the mains cable beside or across sharp edges or hot surfaces. Never wrap the mains cable around the cover of the appliance, do not pull the cable and do not lift the appliance with the mains cable because the cable can break or the insulation can be damaged. A damaged cable must be replaced by an authorised service engineer. The appliance must not be used or connected to a wall socket if the cable is damaged.
- Do not lengthen or alter the mains cable of the appliance. If you need a longer cable between the appliance and the wall socket, you should buy a standard extension cord from an electrical dealer. When using an extension cord, be careful not to create a hazard that you or someone else could trip over.
- After use and before cleaning, always disconnect the appliance from the mains. Never do this by pulling on the cable; always take hold of the plug and pull out of the socket. Switch off the appliance before disconnecting it from the mains.
- Never use an appliance or accessory that the manufacturer did not supply with or propose for use with the appliance. The use of such appliances might lead to accidents or irregular function.

2

- Do not put and store the appliance on direct sunlight, that may cause faded color in the casing, and the operation could be affected as well.
- Don't use the appliance in the presence of explosive or inflammable gases, vapours or liquids.
- The use of the appliance must be avoided in areas where the temperature is too high or too low or where the appliance is subject to vibrations. Avoid using the appliance under wet or vaporous conditions. The appliance can be used within the temperature range of +10°C to +35°C and stored within the range of +5°C to +40°C.
- Take care not to let any aerosol spray inside the appliance.
- The air blower grille of the hair dryer could heat-up during use, therefore avoid contact with the scalp.
- Take care to avoid the power cable of the appliance from getting in way of the hair dryer's air blow holes.
- If you dry your hair while using curlers, do not allow any hairpins, etc. to stick out more than 10 mm (finger width) to avoid any contact with the electric part of the dryer through the air holes.
- Do not cover the air inlets or outlets when using the appliance. A built-in safety cut-out will automatically switch the hair dryer off if these openings are accidentally covered. The appliance will start working again when it has cooled down for a few minutes.
- The air grille in front of the inlet air suction hole of the appliance is made to prevent hair from being sucked in or entangled with it. Keep the hair far from the air suction hole during use. If the openings of the grille have become clogged with lint for some reason, you have to clean them (e.g. with a Hoover or brush) otherwise overheating could occur and the thermal release will turn the appliance off.
- You must not disassemble the appliance, remove its cover or to try to repair it. Ignoring this advice could cause a serious accident. There are no parts in the appliance that can be repaired at home or used for any other purpose. Never operate the appliance with a damaged mains cable or connector. Do not use the appliance if it fails to work normally or

3

if it has been dropped or damaged. If the appliance becomes faulty for any reason or if any moisture is allowed inside, take it to an authorised service engineer for checking and repair. Only service engineers who have been trained and approved should repair the appliance. The manufacturer cannot take any responsibility for unauthorised repairs or for any circumstances resulting from not following the instructions.

**!** Please respect the environment when the appliance reaches the end of its life. Electrical products must not be disposed of with other residential waste because they can damage the natural world and may be hazardous to human health. You should dispose of the appliance at an appropriate recycling site or by using a collection service that specialises in electrical appliances.

You may wish to contact the retailer or the manufacturer if you are unable to find convenient local recycling facilities as they have some legal responsibilities for recycling electrical products.

**!** Please keep this instruction manual. If you give the appliance to anyone else, you must give them this instruction manual, too!

### MAIN PARTS AND CONTROLS

- Hair dryer
- Mains switch (high-off-low)
- Curly power cable between the dryer and the holder
- Mains power cable and plug (not visible on the figure)
- Wall-mounted holder
- Metal bracket
- Hardware for mounting (3x wall plugs, 4x screws) (not visible on the figure)

### POWER SUPPLY

**!** The hair dryer must only be connected to mains voltage between 220-240VAC, 50/60Hz. Make sure your electricity supply is within these limits before connecting the appliance.

4

### BEFORE USING THE HAIR DRYER

Unpack the appliance and remove all the packing materials.

Inspect the appliance and the accessories carefully to verify their soundness and undamaged condition. Only perfectly sound and damage-free appliances may be connected to the electrical mains.

### Fixing the hair dryer to the wall

This procedure requires three holes to be drilled in the wall. We recommend that you arrange for this to be carried out by a professional contractor.

- Remove the metal bracket by pulling it downwards from the wall-mounted holder.
- Hold the metal bracket against the wall and mark where the holes need to be drilled. Take care to ensure you are mounting the appliance in a safe place.
- Drill three holes to accommodate the full length of the wall plugs. Make sure you use an appropriate drill bit for the wall material and the diameter of wall plug.
- Using the screws provided, fit the metal bracket to the wall.
- Fit the wall-mounted holder onto the metal bracket. Make sure the ridges on the metal bracket fit into the slots on the holder, then carefully pull the holder downwards. The fixing hole in the centre of the holder should line up with the threaded hole on the metal bracket.
- Screw the wall-mounted holder to the metal bracket.

### Using the appliance

Turn on the hair dryer by using the mains switch. Moving the switch downwards to 'low' will cause the appliance to operate at a lower speed. Moving the switch upwards to 'high' will cause the appliance to operate at a higher temperature with air being blown more quickly.

5

When switching off the appliance, run it at 'low' for a few seconds before moving the switch to the centre, 'off' position. Finally, replace the hair dryer onto the wall-mounted holder.

### MAINTENANCE AND CLEANING

**!** **Warning! Before you clean the appliance it must be switched off and the mains plug must be removed from the wall socket. Important! Never dip the equipment in water or hold it under running water while cleaning it.**

- To remove hair that's been sucked into the appliance, turn the air filter anti-clockwise and then lift it off. (The air filter is on the air intake at the back of the dryer). Use a vacuum cleaner or brush to remove any hair that's accumulated around the air intake openings. When all hair has been removed, replace the air filter on the dryer and lock it in place by turning it clockwise.
- To clean the handle, wipe it with a soft cloth that's been moistened with a few drops of mild detergent. Next, remove the detergent by wiping with a soft lint-free cloth moistened with lukewarm water. Finally, wipe the cleaned surfaces with a dry lint-free cloth. Take care to ensure no moisture enters the appliance. Make sure the hair straighteners are completely dry before using them again.
- When cleaning the appliance, never use solvent (acetone, benzole, petrol, alcohol, etc.) as these may solve the casing material, or the internal parts of the appliance if they get into. Do not use cleaning agents with coarse or grinding effect.
- Never remove the cover of the appliance.
- Regularly use a vacuum cleaner or brush to remove any hair that's accumulated around the air intake openings.
- After cleaning, store the appliance in a dry and dust-free place if you won't be using it for a while.

6

### SPECIFICATION

7411702 wall-mounted hair dryer has the following technical specifications:

Type:	7411702
Description:	wall-mounted hair dryer
Rated mains voltage:	220-240 V ~ 50/60 Hz
Total power consumption:	1400W
Class of protection:	Class II

7