



## **Nero 4 Slice Toaster Stainless Steel Code: 746084**

### **INSTRUCTION MANUAL**

#### **IMPORTANT SAFEGUARDS**

- Please read this instruction manual carefully before use and keep in a safe place for future reference.
- Incorrect operation and improper handling can lead to malfunction of the appliance and injuries to the user.
- Before first connecting the appliance, check that the voltage indicated on the rating label corresponds to the mains voltage in your home.
- For home use only. Do not use for industrial purposes. Do not use the appliance for any other purposes than described in this instruction manual.
- Do not use outdoors.
- Always unplug the appliance from the power supply before cleaning and when not in use.
- To prevent risk of electric shock and fire, do not immerse the appliance in water or in any other liquids. If this happens DO NOT TOUCH the appliance, unplug it immediately and take it to a service centre.
- Do not take this product into a bathroom or use near water.
- Do not place appliance or parts near an open flame, cooking or other heating appliances.
- Close supervision is necessary when it is used near children.
- Do not leave the appliance switched on when not in use.
- Do not use other attachments than those supplied.
- Do not operate after malfunction or cord damage.
- Do not attempt to repair, adjust or replace parts in the appliance. Check and repair the malfunctioning appliance at your nearest service centre only.
- Keep the cord away from sharp edges and hot surfaces.
- Do not pull, twist, or wrap the power cord around appliance.
- Do not move the appliance until it cools down completely.
- Never use sharp objects to remove sliced bread. When removing sliced bread, be careful not to damage the heating wires.

- Do not touch any metal part of the outer surface of the appliance as it may reach a very high temperature.
- Do not insert bread slices that are too thick or wrapped in aluminium foil to avoid electric shock or fire.

**ATTENTION: TOASTING FOR TOO LONG MAY CAUSE A FIRE.**

- Do not cover the toaster during operation.
- Bread may burn. Therefore toasters must not be used near or below curtains or other combustible materials. They must be watched.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- These appliances are not intended to be operated by means of an external timer or separate remote-control system.
- The surfaces are liable to get hot during use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.



1. Loading handle
2. Cancel Button
3. Defrost Button
4. Reheat Button
5. Browning Control
6. Toasting Slots
7. Crumb Tray

## **INSTRUCTIONS FOR USE**

### **BEFORE THE FIRST USE**

- Before using the toaster for the first time clean the appliance (see paragraph “**CARE AND CLEANING**”). Operate the toaster at least two times without bread but on the highest setting. Ventilate the room during this period.
- As with all new electric heating elements, your toaster creates a smell when it is first switched on. This is quite normal and not a cause for concern.

### **TOASTING**

- Plug toaster into the power supply and place 1 or 2 slices of bread into the bread slots of the appliance.
- Adjust the 7 setting timer to a desired level:
  - 1 - minimum level
  - 7 - maximum level.
- Press down the sliding lever, the toaster will start running automatically and light indicator will go on.
- Bread slices will be ejected out and the appliance will shut down automatically when toasting is finished.

### **REHEAT FUNCTION**

- You can use the reheating facility if cooked toast is cold.
- Insert toast into the toaster and pull down the sliding lever. Press the reheat function button **REHEAT (R)**. The indicator will light up.
- Cold toast can be reheated in short time without over browning.

### **DEFROST FUNCTION**

- Press defrost function button **DEFROST (D)** to prolong toasting time of frozen bread.

### **CANCEL BUTTON**

- Toasting can be reset anytime during toasting by pressing **CANCEL (C)** button.

### **CRUMB TRAY**

- The crumb tray is intended for collecting crumbs, which fall on the base of the toaster while toasting.
- Pull the crumb tray out, empty and place it back.


## CARE AND CLEANING

- Ensure that the appliance is unplugged before cleaning.
- Let the unit completely cool down.
- Do not use abrasive detergents, any organic solvents or aggressive chemicals.

## STORAGE

- Switch off and unplug the appliance; let it cool completely.
- Store the appliance in a dry, cool place.

## CORRECT DISPOSAL OF THIS PRODUCT

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can use this product for environmentally safe recycling.

## Warranty Information

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year (Germany: 2 years), starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances

Imported By R. Weatherdon & Co Pty Ltd  
Sydney - Australia  
[www.weatherdon.com.au](http://www.weatherdon.com.au)

Made in China